

DP C18.UART



CONTENT


Content.....	1	Normal indication area.....	6
Introduction.....	2	Button definition.....	7
Overview drawing.....	3	Normal operation.....	7
Specifications.....	4	User set.....	10
Functional overview.....	5	Error code definition.....	17

INTRODUCTION

- Name: Intelligent display
- Model: DP C18.UART
- Scope: electrically power assistance cycle
- Appearance: the shell is made of PC; The liquid crystal display is made of hardened PMMA



- Numbering on the back of the display
Number on the middle of display back, number is divided into up row and down row:

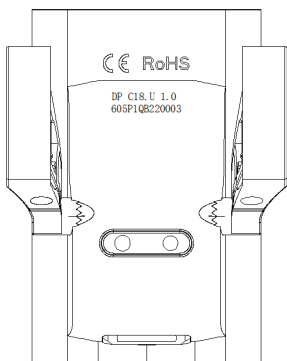

A. Up row number (as below)

DP C18.U 1.0

- ① DP C18.U: BAFANG display model
- ② 1.0: hardware version number

B. Down row number (as below)

605P1QB220003

- ① 605: Wire length and connector model is 230mm M5.2
 - ② P1: design number
 - ③ QB220003: Production date is 21st Nov. 2016; SN is 0003
- Display P type wire label number rule
Number on the middle of P type label, number is divided into up row and down row and QR code is at right side (as shown in the below figure)



Content of QR code:

DPC18P10101.0
PD2528051505
DP C18.U 1.0
605P1QB220003

The first line:

DPC18P10101.0 - Software version

The second line:

PD2528051505 - Parameter code

The last two lines:

DP C18.U 1.0 / 605P1QB220003 - SN

OVERVIEW DRAWING




SPECIFICATIONS

- Rated voltage: 36V/43V/48V DC
- Rated current: 10mA lines(as shown in the figure)
- Maximum operating current: 30mA
- When power off, leak current is less than: 1uA
- Operating current supplied to controller: 50mA
- Operation temperature: -20 °C~45 °C
- Storage temperature: -30 °C~70 °C
- IP level: IP65
- Storage humidity: 30%-70%

FUNCTIONAL OVERVIEW

- Use of a two-way serial communication protocol, simple operation of the display via the external 5-key keypad.
- Speed display: displaying the real-time speed as SPEED, the maximum speed as MAXS and the average speed as AVG.
- Km or mile: The user can choose between km and mile.
- Intelligent battery level indication: With an optimization algorithm, a stable display of the battery level is ensured, and the problem of fluctuant battery level indication common with other displays is avoided. The user can define display mode of battery level as voltage or percentage.
- Automatic light-sensitive lights: The headlight, taillight and display backlight will be automatically turned on/off depending on lighting conditions.
- 5 levels off display backlighting: 10% is most dark, 100% is highest light.
- 6-Level-Support: setting power Levels 0 to 5.
- Trip distance indication: The maximum distance displayed is 99999. Single-trip distances TRIP or the total distance TOTAL can be displayed.
- Display of error messages
- Walk assistance
- Two kind of riding mode: "ECO"/"SPORT"
- Intelligent display: including motor's output power W for riding, output current A, Remaining miles RANGE, consumption of energy CALORIES.
- Set boot password: user can set boot password by himself.
- Set parameters: Various parameters, e.g. power assistance level, wheel diameter, speed limit etc., can be set on the computer via a communication cable. Please see the detailed in the description of the computer parameter configuration.
- Through the display, it can switch wheel diameter and speed limit.

NORMAL INDICATION AREA

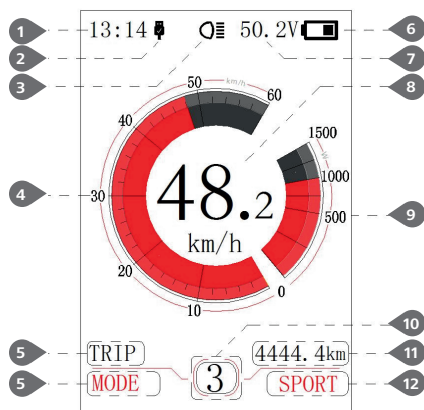

1 Time display:

The time is represented in the 24-hour system and show the current time, time can be set in the "Set clock".

2 USB charge display:

When external connect into the display, it display the symbol.

3 Headlight indication:

Only shows when headlight is on.

4 Speed scale display:

the scale value is in accordance with the digital value.

5 Mode select:

single-trip distance (TRIP) → total distance

ODO → maximum speed (MAX) → average speed (AVG) → remaining distance (RANGE) → energy consumption (CALORIES) → time (TIME).

6 Battery level display:

Display current battery level value.

7 Voltage display/percentage display:

Display actual battery level value, display mode can be set in the "Soc View".

8 Speed digital display:

Display current speed value, speed unit can be set in "Unit".

9 Power scale display/current scale display:

Display current output value, output unit can be set in "Power View".

10 Power assistant level display/walk assistance:

Display the seven levels as "0"/"1"/"2"/"3"/"4"/"5"/"🚲", briefly press (0.5S) \oplus or \ominus to switch the level. Touch and hold (2S) \oplus to start the mode "walke assistance", display \oplus symbol.


11 Mode data display:

Display current data corresponding to the mode.

12 Riding mode display:



Display current riding mode, "SPORT" or "ECO", can touch and hold (2S) \oplus to switch the mode.

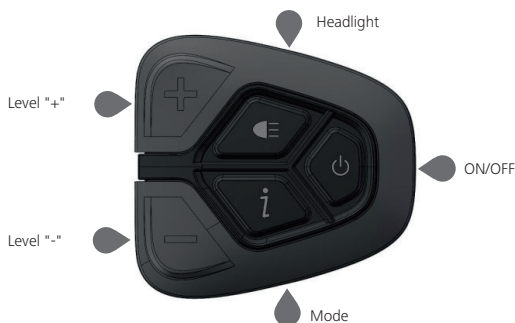BUTTON DEFINITION






NORMAL OPERATION

- On/off switch

Turn on the power, press and hold (>2S)  to power on the display, the display begin to operate. Press and hold (>2S)  again to power off the display. If the bike is not used, after 5 minutes (time can be set in "Auto Off") the display will be automatically turned off. If the password function of the display is activated, need to input the correct password to enter into the normal display interface.


- Power assistance level select

In the manual gearshift mode, briefly press (<0.5S)  or  to switch the level to change the assistance power, The lowest level is Level 0, the highest Level 5. When the display is on, the default mode is Level 1, "0" means no power assistance.

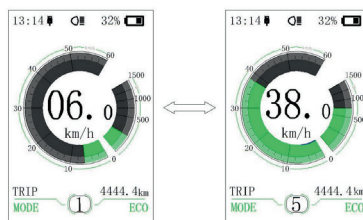




- Switch between Distance Mode and Speed Mode

Briefly press (0.5s) **I** to switch the display between the distance and speed, cycle show signal-trip distance (TRIP) → total distance (ODO) → maximum speed (MAX) → average speed (AVG) → remaining distance (RANGE) → energy consumption (CALORIES) → time (TIME). Energy consumption unit CALORIES means kCal.


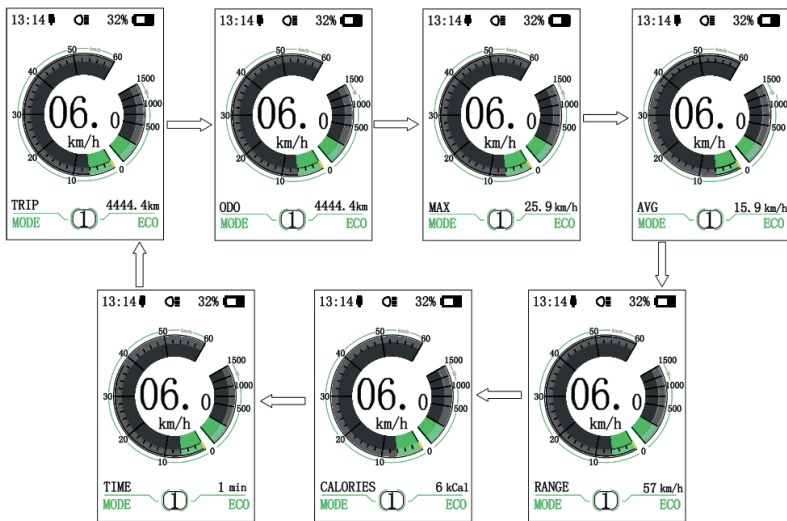



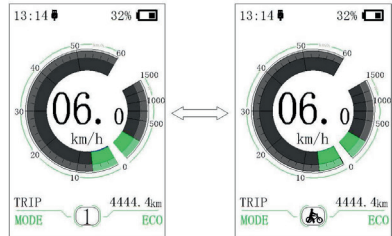
- Headlight / Display Backlight Switch

Press and hold (>2S)  to turn on the display backlight as well as headlight. Press and hold (>2S)  again to turn off the display backlight and the headlight. There are 5 levels of backlight brightness that can be selected by the user (can be set in the "Brightness"). (If the display is turned on in a dark environment, the display backlight/headlight will be turned on automatically. If the display backlight/headlight are turned off manually, they also need to be turned on manually afterwards)

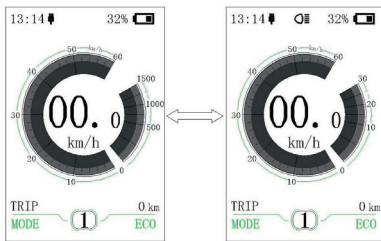


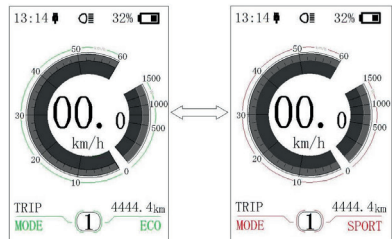
- Walk assistance mode

Press and hold (>2S)  to enter into walk assistance mode, the symbol  is displayed, when release key , will exit the walk assistance mode.




- Switch mode between ECO and SPORT

Press and hold (>2S)  to switch riding mode into "ECO" or "SPORT".



USER SET

- Operating process in the set interface

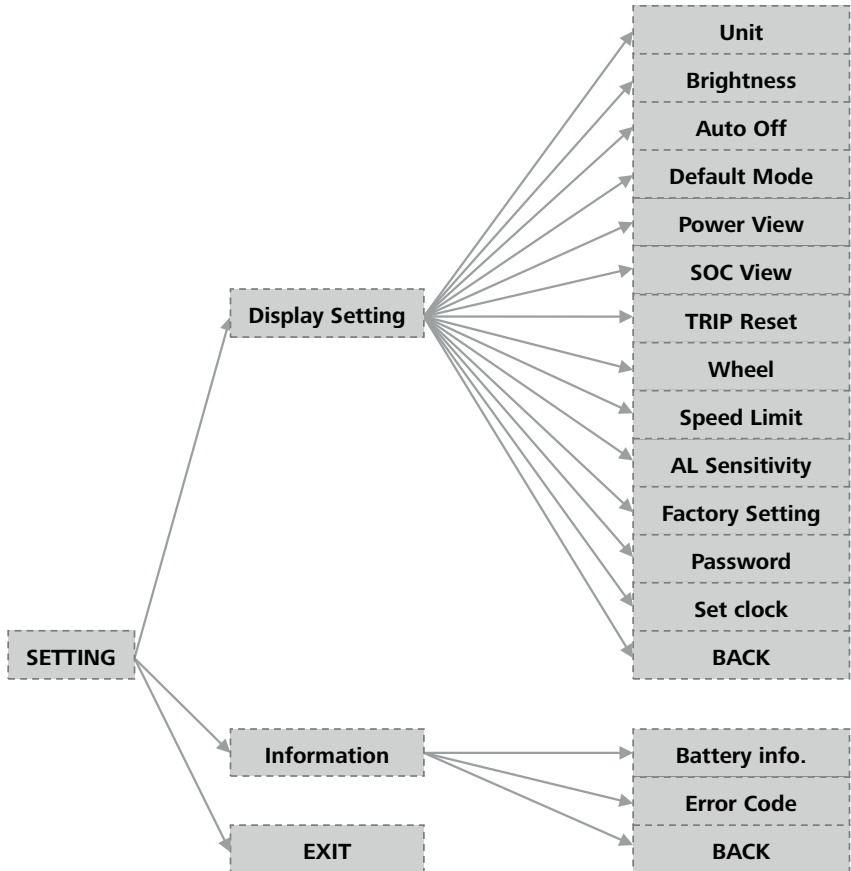

Enter into "SETTING" interface.


After turn on the display, briefly press (<0.5S) **i** for two times to enter into the "SETTING" interface. The interface includes the three options as "Display setting", "Information" and "EXIT". Briefly press (<0.5S) **+** or **-** to switch the options and then briefly press (<0.5S) **i** to confirm and enter into the option. Select "EXIT" and briefly press (<0.5S) **i** to exit the interface or briefly press (<0.5S) **i** for two times in any interface to exit the set inface. The set dates are saved for the two exit mode. If there is no operation within 20s and then exit the set interface, no any dates are saved.

- Enter into "Display setting" interface

In "SETTING" interface, briefly press (<0.5S) **+** or **-** to select "Display setting" and then briefly press (<0.5S) **i** to confirm and enter into "Display setting". There are thirteen set options in the interface.

(1) "Unit"--- unit switch between the km and mile

Briefly press (<0.5S) **+** or **-** to select "Unit", and then briefly press (<0.5S) **i** to enter into the set interface. Briefly press (<0.5S) **+** or **-** to select "Metric"/ "Imperial", and then briefly press (<0.5S) **i** to save the set and exit back to "Unit" interface. Briefly press **i** for two times (interval time is less than 0.5S) to exit back to main interface, or select "BACK" → "EXIT" to exit back to the main interface.

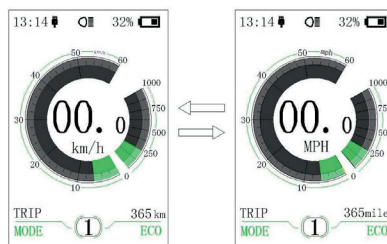

(2) "Brightness"--- set display brightness

Briefly press (<0.5S) **+** or **-** to select "Brightness" and then briefly press (<0.5S) **i**. This moment, briefly press (<0.5S) **+** or **-** to switch the percentage as "100%" / "75%" / "50%" / "30%" / "10%". 100% is the highest brightness, 10% is lowest brightness. After select the brightness percentage, briefly press (<0.5S) **i** again to save the set and exit back to "Brightness". Briefly press **i** for two times (interval time is less than 0.5S) to exit back to main interface, or select "BACK" → "EXIT" to back the main interface.

(3) "Auto Off"--- set automatic Off time

Briefly press (<0.5S) **+** or **-** to select "Auto Off", and then briefly press (<0.5S) **i**. This moment, briefly press (<0.5S) **+** or **-** to switch automatic Off time as "OFF"/"9"/"8"/"7"/"6"/"5"/"4"/"3"/"2"/"1".


The unit is minute. After selection, briefly press (<0.5S) **i** to save the set and exit back to "Auto Off". Briefly press **i** for two times (interval time is less than 0.5S) to exit back to main interface or select "BACK" → "EXIT" to exit back to main interface.

(4) "Default Mode"--- set riding mode for starting up

Briefly press (<0.5S) **+** or **-** to select "Default Mode", and then briefly press (<0.5S) **i**. This moment, briefly press (<0.5S) **+** or **-** to switch default riding mode for starting up as "ECO"/"Sport". After confirmation, briefly press (<0.5S) **i** again to save the set and exit back to "Default Mode". And then briefly press **i** for two times (interval time is less than 0.5S) to exit back to main interface, or select "BACK" → "EXIT" to exit the main menu.


(5) "Power View"--- set output display mode

Briefly press (<0.5S) **+** or **-** to select "Power View", and then briefly press (<0.5S) **i**. This moment, briefly press (<0.5S) **+** or **-** to switch the output display mode as "Power"/"Current". After confirmation, briefly press (<0.5S) **i** again to save the set and exit back to "Power View". Briefly press **i** for two times (interval time is less than 0.5S) to exit back to the main interface, or select "BACK" → "EXIT" to exit back the main interface.

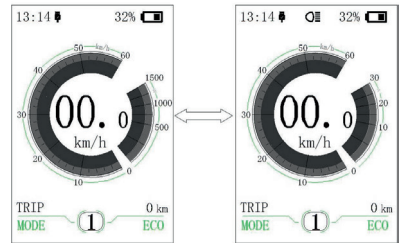

(6) "SOC View" --- set display mode for battery level

Briefly press (<0.5S) **+** or **-** to select "SOC View", and then briefly press (<0.5S) **i**. This moment, briefly press (<0.5S) **+** or **-** to switch display mode for output as "Percent"/"Voltage". After confirmation, briefly press (<0.5S) **i** to save the set and exit back to "SOC View". Briefly press **i** for two times (interval time is less than 0.5S) to exit back to the main interface, or select "BACK" → "EXIT" to exit back to the main menu.

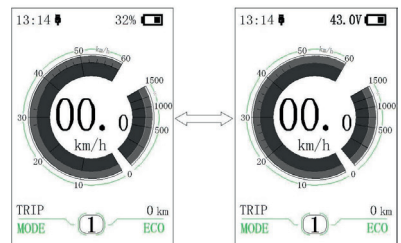

(7) "TRIP Reset" --- set reset function for single-trip distance

Briefly press (<0.5S) **+** or **-** to select "TRIP Reset", and then briefly press (<0.5S) **i**. This moment, briefly press (<0.5S) **+** or **-** to switch between "NO" and "YES". TRIP Reset includes maximum speed (MAXS), average speed (AVG), single-trip distance (TRIP). After confirmation, briefly press (<0.5S) **i** again to save the set and exit back to the "TRIP Reset". Briefly press **i** for two times (interval time is less than 0.5S) to exit the main interface, or select "BACK" → "EXIT" to exit back to the main interface. The data is not reset automatically when turn off the display or turn off the power of the bicycle.

(8) "Wheel" --- set the wheel diameter

Briefly press (<0.5S) **+** or **-** to select "Wheel", and then briefly press (<0.5S) **i**. This moment, briefly press (<0.5S) **+** or **-** to select the wheel diameter as "6"/"7"/"8"/...../"32"/"33"/"34". After confirmation, briefly press (<0.5S) **i** to save the set and exit back to "Wheel". Briefly press **i** for two times (interval time is less than 0.5S) to exit back to main interface or select "BACK" → "EXIT" to exit back to main menu.

(9) "Speed Limit" --- set speed limit

Briefly press (<0.5S) **+** or **-** to select "Speed Limit" and then briefly press (<0.5S) **i**. This time, briefly press (<0.5S) **+** or **-** to select the number as "10"/"11"/"12"/...../"58"/"59"/"60". After confirmation, briefly press (<0.5S) **i** to save the set value and exit back to "Speed Limit". Briefly press **i** for two times (interval time is less than 0.5S) to exit back to main interface or select "BACK" → "EXIT" to exit back to main interface.

(10) "AL Sensitivity" --- set light sensitivity

Briefly press (<0.5S) **+** or **-** to select "AL Sensitivity", and then briefly press (<0.5S) **i**. This moment, briefly press (<0.5S) **+** or **-** to switch level of the light sensitivity between "0"/"1"/"2"/"3"/"4"/"5"/"OFF". "OFF" means close the function. Level 1 is the weakest light sensitivity and level 5 is the strongest light sensitivity. Select the level desired and briefly press (<0.5S) **i** again to save the setting and exit back to "AL Sensitivity". Briefly press **i** for two times (interval time is less than 0.5S) to exit back to main interface or select "BACK" → "EXIT" to exit back to main interface.

(11) "Factory Setting"--- Restore factory Settings

Briefly press (<0.5S) **+** or **-** to select "Factory Setting" and then briefly press (<0.5S) **i**. This moment, briefly press (<0.5S) **+** or **-** to select "YES" / "NO". Select "YES" and briefly press (<0.5S) **i**. When display the "OK", it means it is successful to restore the factory setting. Briefly press **i** for two times (interval time is less than 0.5S) to exit back to main interface or select "BACK" → "EXIT" to exit the main interface.

(12) "Password"--- boot password setting


Briefly press (<0.5S) **+** or **-** to select "Password" and then briefly press (<0.5S) **i**. This moment, briefly press (<0.5S) **+** or **-** to select "Start PassWord" and then briefly press (<0.5S) **i** again. Briefly press (<0.5S) **i** or to switch between "OFF" / "ON", the below is the specific way of switching.

Starting password:

Enter into "Start PassWord" interface and select "ON". Briefly press (<0.5S) **i**, and then it show input password in the interface.

This moment, briefly press (<0.5S) **+** or **-** to switch numbers “0-9”, and then briefly press (<0.5S) **i** to confirm input number. After input, it show input password again in the interface. Repeat the above step to input password again. If the password is same with the previous time, the system will prompt it is successful to set password, otherwise it need to repeat the first step to input the new password and then re-confirm.


After setting the password, the interface exit back automatically to original interface within two seconds. Briefly press **i** for two times (interval time is less than 0.5S) to exit back to main interface or select “BACK” → “EXIT” to exit back to main interface.

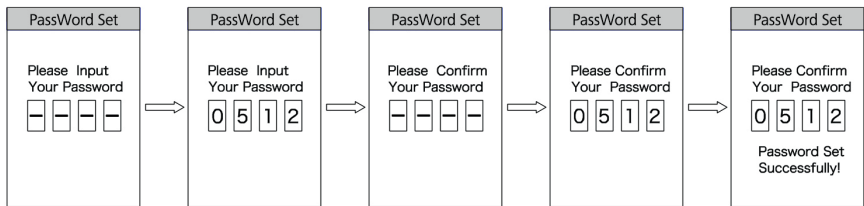

Change password:


After setting the password, the interface “Password” will add option “Reset Password”. Briefly press (<0.5S) **+** or **-** to select “Reset Password”, and then briefly press (<0.5S) **i**. This time it prompt input current password in the interface. If inputing wrong password for ten tiems, the display will turn off automatically. When inputing right password, it prompt input new password in the interface. The following step is same with starting password. After changing the password, it will exit automatically back to the original interface within two seconds.

Briefly press for **i** two times (interval time is less than 0.5S) to exit back to the main interface or select “BACK” → “EXIT” to exit back to main interface.

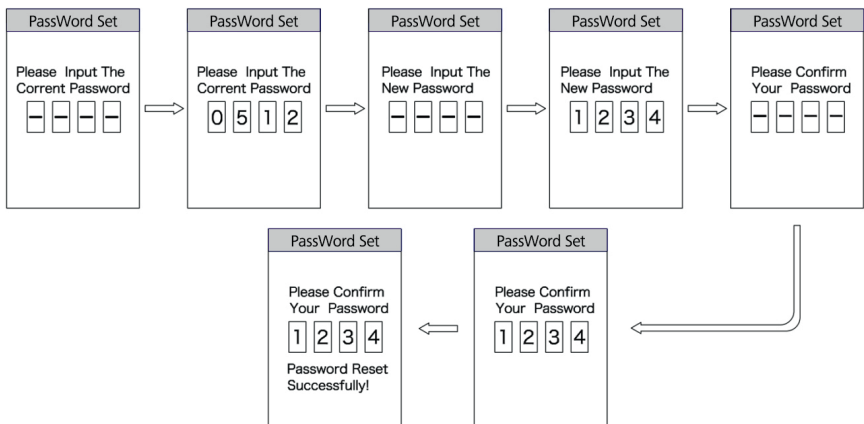

Close password:

Enter into "Start PassWord" interface to select "OFF" and then briefly press (<0.5S) **[i]**. This moment, it prompt input password in the interface. If inputing wrong password for ten times, the display will turn off automatically. After inputing right password, it prompt it is successful to close password in the interface. Two seconds later, it exit back automatically to the original interface. Briefly press **[i]** for two times (interval time is less than 0.5S) to exit back to the main interface or select "BACK" → "EXIT" to exit the main interface.

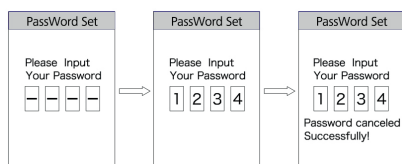

(13) "Set Clock"--- time setting

Briefly press (<0.5S) **[+]** or **[-]** to select "Set Clock" and then briefly press (<0.5S) **[i]**. The time is represented in the 24-hour system. Cursor stays at the first digit of the clock. Briefly press **[+]** or **[-]** to select "0-2" and then briefly press (<0.5S) **[i]** to confirm the selection. This moment, the cursor switch to the second digit of the clock. Briefly press **[+]** or **[-]** to select "0-9", and then briefly press (<0.5S) **[i]** to confirm the selection. And the cursor will switch to the first digit of the minute. Briefly press **[+]** or **[-]** to select "0-5", and then briefly press (<0.5S) **[i]** to confirm the selection. The cursor will switch the second digit of the minute, and then briefly press (<0.5S) **[+]** or **[-]** to select "0-9". Briefly press (<0.5S) **[i]** to save the selection and exit back to "Set Clock". Briefly press **[i]** for two times (interval time is less than 0.5S) to exit back to the main interface or select "BACK" → "EXIT" to exit back to the main interface.

- Enter into "Information" interface

Enter into "SETTING" interface and briefly press (<0.5S) **+** or **-** to select "Information" and briefly press (<0.5S) **i** to confirm and enter into the interface. It can check all content in the interface "Information", but can't use the display to modify the content.

(1) "Battery Info."check

Briefly press (<0.5S) **+** or **-** to select "Battery Info." and briefly press (<0.5S) **i** to enter into information display interface. This moment, select "Nest Page" and briefly press (<0.5S) **i** to switch the display interface. If detecting no data, it display "--". See the content and corresponding explanation shown in the table below:



Display content	Explanation	Display content	Explanation
TEMP	Current temperature	Cycle Times	Cycle Times
TotalVolt	Battery voltage	Max Uncharge Time	Max Uncharge Time
Current	current	Last Uncharge Time	Last Uncharge Time
Res Cap	remaining battery capacity	Total Cell	The number of cell
Full Cap	Battery capacity of Full charged	Cell Voltage 1	Voltage Cell 1
RelChargeState	Relative Charge in percentage	Cell Voltage 2	Voltage Cell 2
AbsChargeState	Absolute Charge in percentage	Cell Voltage n	Voltage Cell n

Briefly press **i** for two tiems (interval time is less than 0.5S) to exit back to main interface or select "BACK" → "BACK" → "EXIT" to exit back to the main interface.

(2) "Error Code"check

Briefly press (<0.5S) **+** or **-** to select "Error Code" and briefly press (<0.5S) **i** to enter into the interface in which it display information. "E-CODE" display the error information for last ten times. "E-CODE 1" represents the error content for the last time. "E-CODE 10" represents the error content up to the tenth time. The maximum ten records can be kept. Error code "00" means no error. Please see the error code table to know about the definition of the other codes.

ERROR CODE DEFINITION

 DP C18.UART display can show e-bike faults. When a fault is detected, the icon  will be displayed. One of the following error codes will be displayed.

Error code	Error definition	Error-shooting method
"04"	The throttle has not returned home	Check if throttle has returned home
"05"	Throttle fault	Check the throttle
"07"	Overvoltage protection	Check battery voltage
"08"	Motor hall signal cable fault	Check the motor module
"09"	Motor phase cable fault	Check the motor module
"11"	Controller temperature sensor fault	Check the controller
"12"	Current sensor fault	Check the controller
"13"	Battery temperature fault	Check the battery
"14"	Motor temperature fault	Check the motor
"21"	Speed sensor fault	Check the installation position of speed sensor
"22"	BMS communication fault	Replace the battery
"30"	Communication fault	Check the controller connection

NOTES

NOTES
